


FNR5 Solenoid ID / Pin Reference

Ford Connector


Mazda Connector

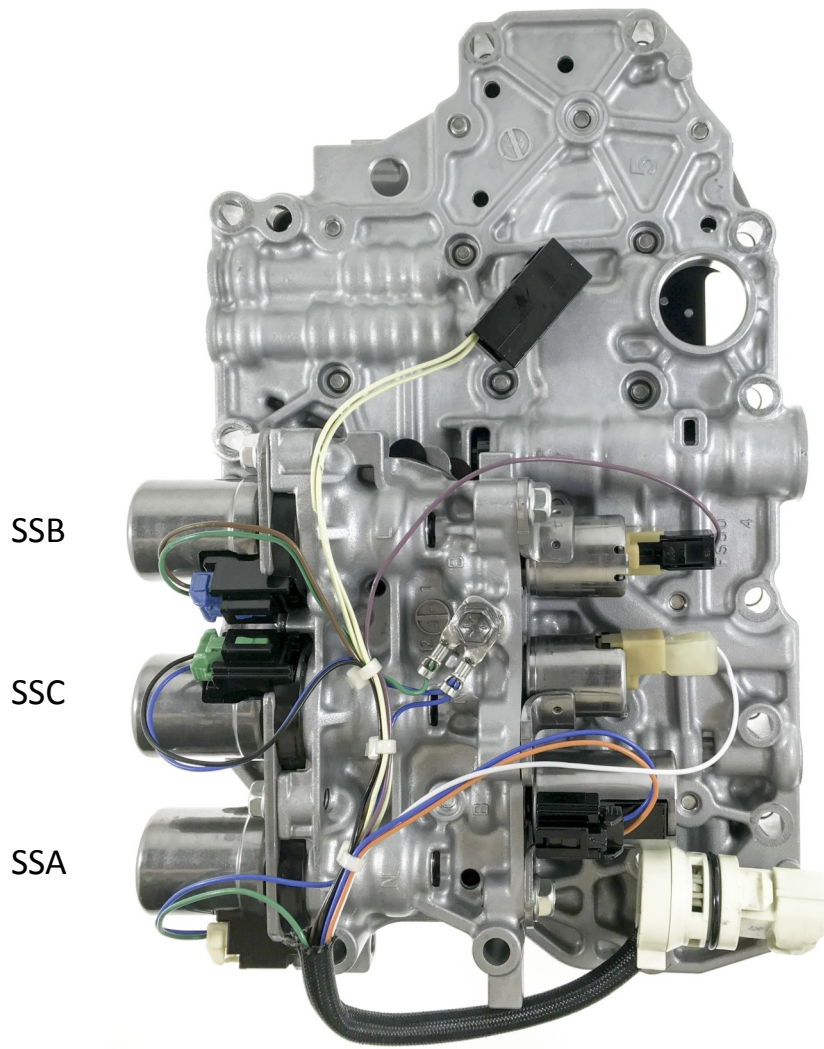

SSE - On/Off

SSD - On/Off

PCA - EPC

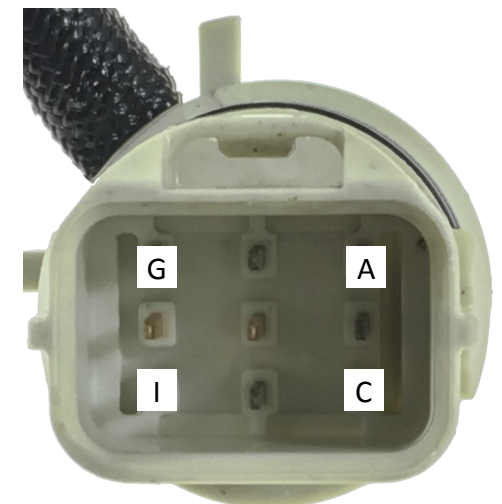

PCA - EPC 2&7

SSA 3

SSB 9

SSC 1

SSD 6

SSE 8

TOT 5&4

PCA - EPC D&I

SSA A

SSB C



SSC G

SSD B

SSE F

TOT H&E

Mazda TCM / Pin Reference

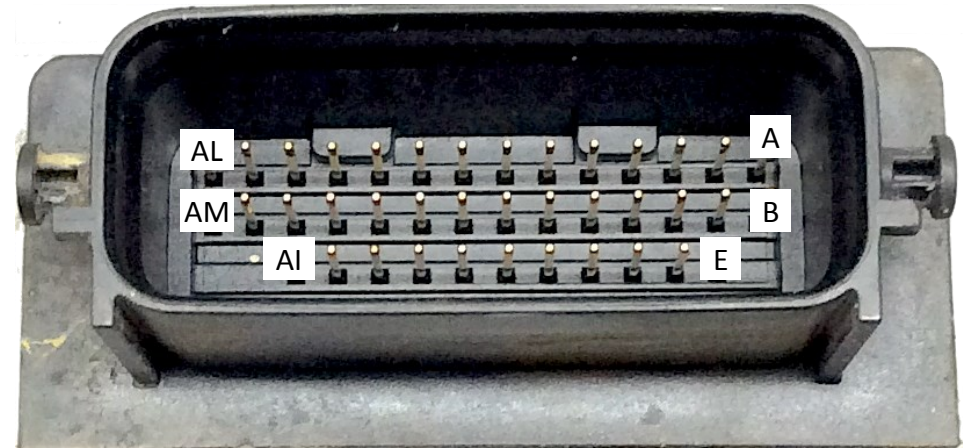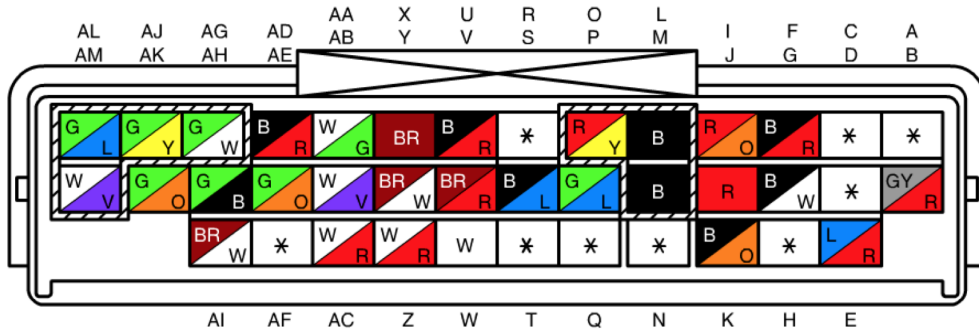

- A
- B Data line
- C
- D
- E Data Line
- F Downshift SW
- G Up-shift Sw
- H
- I AT Main Relay +
- J B +
- K M Range Sw
- L Ground
- M Ground
- N
- O AT Main Relay +
- P Ground for AT Main Relay
- Q
- R
- S Forward Press Sw
- T

- U Reverse Signal Return
- V Ref. voltage Reverse and TFT
- W Cruise control module
- X Ground
- Y TSS
- Z VSS
- AA TFT Signal
- AB TSS
- AC Interm. Shaft signal
- AD EPC -
- AE EPC +
- AF
- AG SSA +
- AH SSD +
- AI SSF + second VB
- AJ SSB +
- AK SSE +
- AL SSC +
- AM PCB + second VB